

Brunata Futura Heat

Useful information about the display on Brunata's heat cost allocator



Easy-to-read display

Futura is easy to read. You do not need to press any buttons and the allocator display shows you: Your total heat consumption this year, your consumption last year, the scale used and the allocator number.

What the allocator shows

⌚ Consumption this year

The heat consumption is measured in units and calculated in a counter. It is shown as ⌚ on the Futura display. On day one of the new heating billing year, the measuring of "Consumption this year" automatically starts at zero.

🕒 Consumption last year

The consumption during the past year is registered on the cut-off date of the building's heating billing year. The value is saved in the allocator and showed on the display as 🕒. This enables you to monitor your heat consumption and compare it with last year's consumption.

📏 Scale and control figure

During the fitting, each allocator is adjusted to the radiator performance through a scale. This ensures that the heat consumption is measured correctly and is comparable with the consumption from other radiators fitted with Futura heat cost allocators.

The heat cost allocator is issued with a control figure (encrypted), which provides an additional guarantee of correct reading of the consumption when you read the allocator yourself. The control figure is shown to the left of the scale figure.

Allocator number

Each allocator has a unique allocator number. When Brunata calculates the heating bill, the allocator number will provide information about the allocator's location, scale, etc.